



*This drawing is for reference only.  
Please use the "Configure Your Assembly" link, then  
"Download Order Form" to specify your requirements.*

ENERPRO-SUPPLIED  
COMPONENTS

**NOTES**

1. SCR gating is enabled with the switch in the position shown. Close the Switch to begin inhibit ramp-down and inhibit.
2. SCR gating is enabled with the switch in the position shown. Open the switch to instantly inhibit gating.
3. TS1 - TS3 close at 60°C to energize fans.
4. TS4 - TS6 open at 93°C to indicate heatsink over-temperature.
5. Enable status relay contact will close when FCOG6100 board is enabled.

		<b>ENERPRO</b>	
		TYPICAL PCP 485 A THREE PHASE OPEN LOOP AC CONTROLLER	
		SIZE: A	<b>E2335</b>
		1 of 1	